



**41171**

**ΟΔΗΓΙΕΣ ΧΡΗΣΕΩΣ  
INSTRUCTIONS MANUAL**



**ΑΠΟΣΤΕΙΡΩΤΗΣ  
STERILIZER**




Τοποθετήστε το ελατήριο (C) μέσα στο έμβολο (A). Τοποθετήστε το έμβολο (C+A) μέσα στο κύλινδρο (B). Σταθεροποιήστε το ελατήριο και το έμβολο με το καπάκι (D).

Το καπάκι πρέπει να τοποθετηθεί στη θέση του και να περιστραφεί (με την φορά του ρολογιού). Για να γίνει πιο εύκολη η συναρμολόγηση υγράνετε την ελαστική φλάντζα.

Τοποθετήστε το συναρμολογημένο κύλινδρο (A+B+C+D) μέσα στο δοχείο (E) και σταθεροποιήστε το με το σύστημα κλειδώματος (βάλτε το κάτω από "E").

Σας συστήνουμε να ξεβγάζετε με ζεστό νερό αμέσως μετά την χρήση. Αποθηκεύστε την συσκευή αποσυναρμολογημένη μέχρι την επόμενη χρήση της.

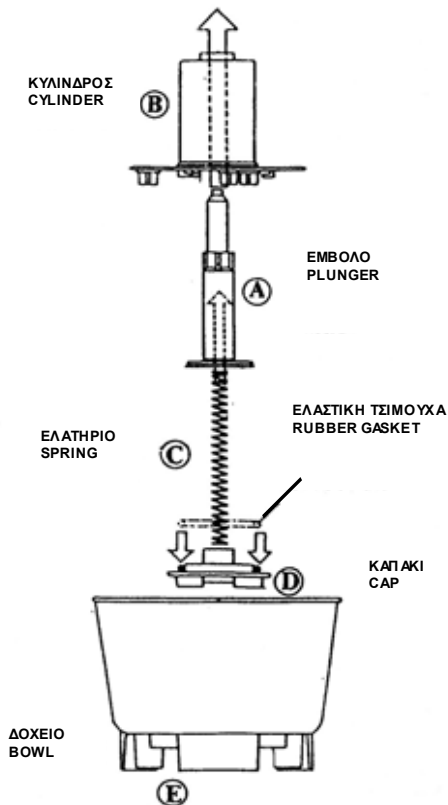

Insert the spring (C) inside the plunger (A).  
Insert the plunger (C+A) into the cylinder (B).  
Fix the spring and plunger with the cap (D)

The cap has to be placed in its seat and turned round (clockwise). Moisten the rubber gasket to make the assembling much easier.

Insert the assembled cylinder (A+B+C+D) inside the bowl (E) and fix to through the locking system (insert at the bottom of "E").

We recommend rinsing with warm water immediately after use. Put it away unassembled till the next use.