

41201 – 41211

**ΟΔΗΓΙΕΣ ΧΡΗΣΕΩΣ
INSTRUCTIONS MANUAL**




**ΥΔΡΑΥΛΙΚΟ ΠΛΥΝΤΗΡΙΟ ΜΠΟΥΚΑΛΙΩΝ ΜΕ
ΠΕΡΙΣΤΡΕΦΟΜΕΝΗ ΑΝΟΞΕΙΔΩΤΗ ΒΟΥΡΤΣΑ**

**HYDRAULIC BOTTLE WASHER WITH ROTARY
STAINLESS STEEL BRUSH**



- Συνδέστε το πλυντήριο σε τρεχούμενο νερό και τοποθετήστε το μοχλό A στην θέση “CHIUISO” (Κλειστό).
- Ανοίξτε την παροχή νερού.
- Για να αποχωρήσει η βούρτσα, σηκώστε το στήριγμα Νο5.
- Τοποθετήστε το μπουκάλι
- Τοποθετείστε το μοχλό A στο “APERTO” (Ανοιχτό). Για καλύτερο πλύσιμο, ανακινείστε το μπουκάλι πάνω κάτω μέχρι να καθαρίσει.
- Πριν απομακρύνετε το πλυμένο μπουκάλι, τοποθετήστε ξανά το μοχλό A στο “CHIUISO” (Κλειστό).
- Ανταλλακτικές βούρτσες είναι διαθέσιμες εφ’ όσον ζητηθούν. Πριν συναρμολογήσετε το πλυντήριο, συνδέστε τα τρία κομμάτια του κυπέλλου 4.

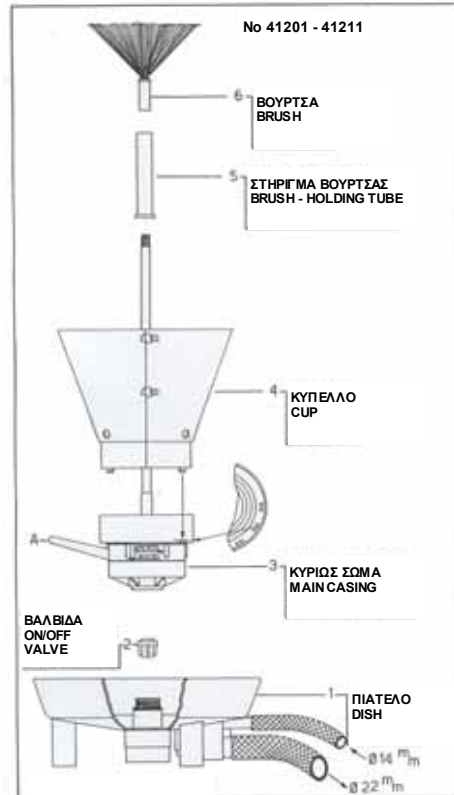

- Connect to running water and position lever A on “CHIUISO” (OFF).
- Turn water on.
- To draw back brush, lift tube No5.
- Place bottle.
- Position lever A on “APERTO” (ON). For a thorough wash, move up and down the bottle till clean.
- Before removing the washed bottle, position lever A on “CHIUISO” (OFF) again.
- Spare brushes available on request. Before assembling the bottle washer, join the three cup sections 4.